18" Soundbar with Bluetooth Wireless

User's Guide for Model HTB017 v1863-01

FCC WARNINGS

Warning: Changes or modifications to this unit not expressly approved by the party responsible for

compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Recrient or relocate the receiving antenna.

 Increase the separation between the equipment and receiver.

 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

ADDITIONAL WARNINGS

- WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 WARNING: Shock hazard - Do Not Open.

 Caution and marking information is located at the rear or bottom of the apparatus.

- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected form the mains socket outlet completely.
- CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
 Objects filled with liquids, such as vases, shall not be placed on the apparatus
- WARNING: Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.

 WARNING: This product may contain chemicals known to the State of California to cause birth defects, or other reproductive harm (California Prop 65). Wash hands after handling.
- · This product meets and complies with all Federal regulations.


Overview

Features

Supports Bluetooth wireless

Analog volume control

- Wireless range: 60 ft
- Built-in dual 3.5 mm audio cables for audio & mic Built-in USB power cable

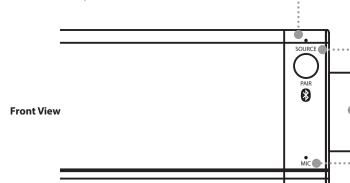

Source/Pairing Indicator

Green - Aux In Slowly Flashing Blue - Ready to pair

Quickly Flashing Blue - Pairing Solid Blue - Successfully Paired

Source/Pair Bluetooth

Short press to switch between Aux In and Bluetooth In Bluetooth mode, press and hold to pair.

Power/Volume Dial

Turn dial to power the speaker ON and adjust volume.

· · · · · · Mic

Bluetooth Wireless Audio


Pairing to a Device & Playing Audio

After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device. If your device should become unpaired or you find it is unable to connect, repeat the steps listed here.

- Power ON the unit and press the source button to bluetooth mode. Press & Hold the **Source button** to begin pairing. The **Pairing indicator** will begin flashing quickly. When pairing, remain within 3 feet of the unit.
- 2. Using the controls on your Bluetooth device, search for and select **HTB017** in your Bluetooth settings to pair. If your device requests a password, enter the default password 0000. If need be, refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.
- When successfully paired, the **Pairing indicator** will turn solid and an audible chime will sound. Use the controls on the connected device to select and begin playing audio.

Power & Aux In

- Connect the power plug to a USB port on a powered on computer or USB power adapter (not included).
- Connect the built-in 3.5mm audio cables to the audio and microphone outputs on a computer or other external audio source. Audio played from this source should now be heard through the soundbar.

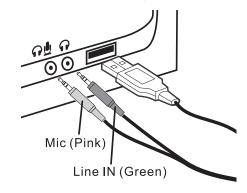

INTERNATIONAL SUPPORT

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: www.gpx.com

For Warranty Information and the most up-to-date version of this User's Guide, go to www.gpx.com

Customer Service: 1-888-999-4215 | Email Support: prodinfo@dpiinc.com | Email Parts: partsinfo@dpiinc.com

Copyright © 2017 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

