


BASE ASSEMBLY

Illustrations 1

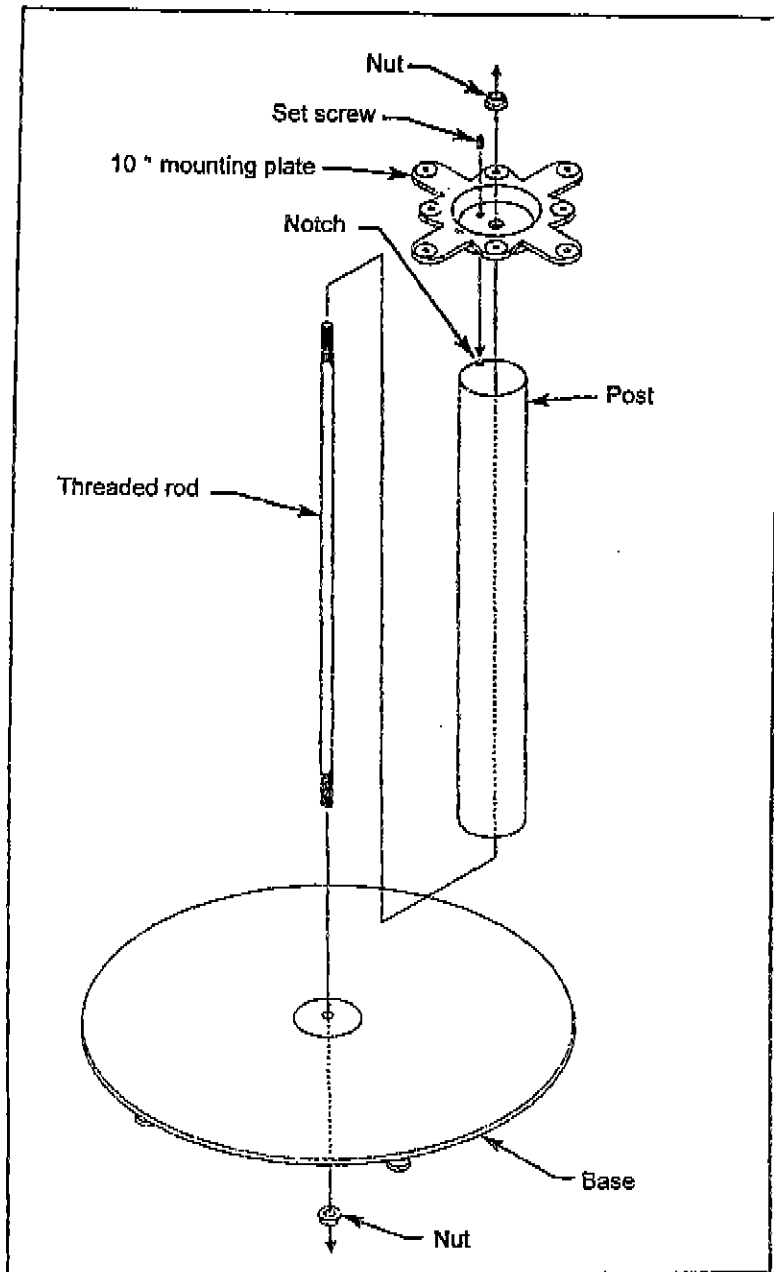

Read all instructions and review illustrations before installing.

Tools required for assembly:
Flat blade screwdriver
Socket wrench
18mm socket
Adjustable wrench

This assembly includes:
(1)Base
(1)Post
(1)Threaded rod
(1)10" mounting plate
(1)Set screw
(2)Nut

⚠ WARNING

Sharp edges may cause injury. Take care when handling metal parts.

Note

Illustration shows assembly of the Round Base. Other base styles assemble the same.


Assembly (refer to illustration 1):

1. Insert threaded rod through hole in center of base and thread a nut onto end of rod.
2. With notched end up, position post over top threaded rod. Ensure post is centered onto base.
3. Position 10" mounting plate on top of post, inserting end of threaded rod through hole in center of mounting plate.
4. Align set screw hole, in 10" mounting plate, with notch cut into top of post.
5. Use the flat blade screwdriver to install set screw through hole in mounting plate and into notch in post.
6. Thread remaining nut onto end of threaded rod.
7. After ensuring that all parts are correctly aligned, use the adjustable wrench to prevent nut below the base from turning and use the socket wrench and 18mm socket to fully tighten nut above mounting plate.
8. Refer to the template attached to bottom of the table top for instructions on attaching base assembly to top.

INSTALLATION INSTRUCTIONS

XSP-BASE

Illustrations 1

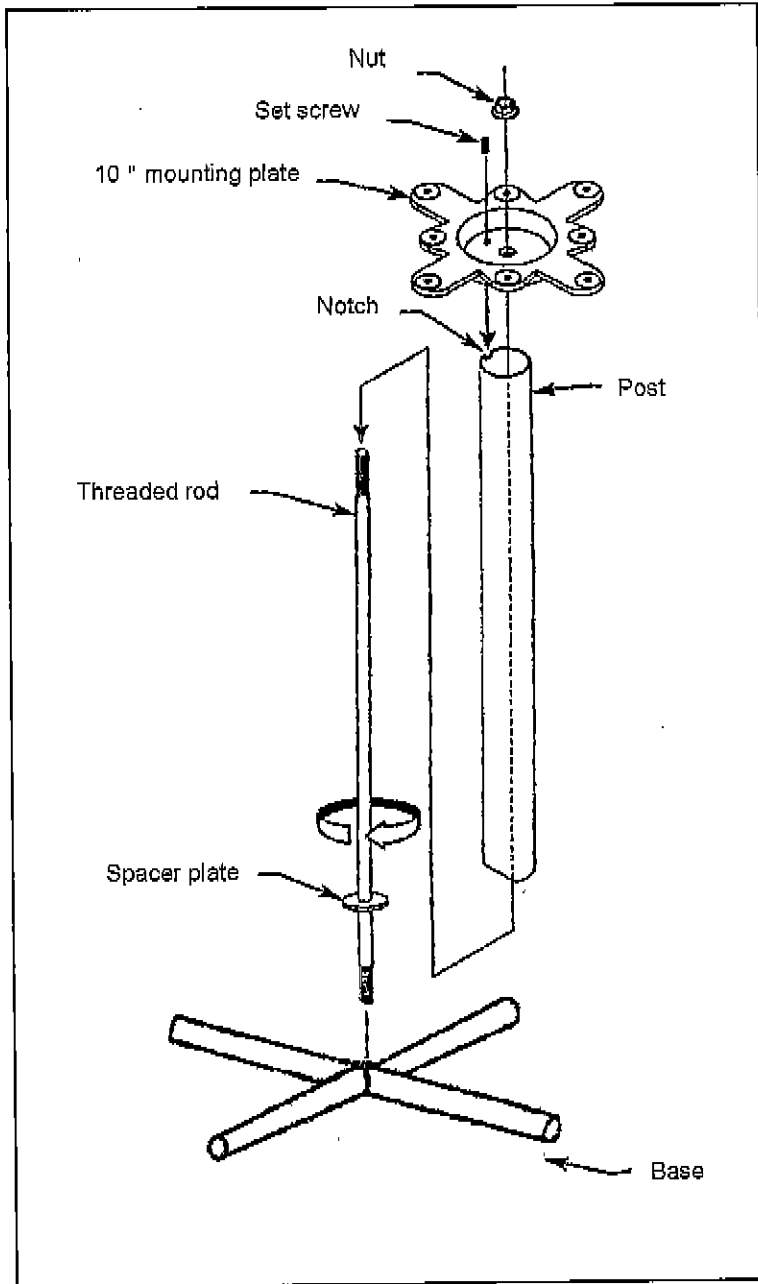

Read all instructions and review illustrations before installing.

Tools required for assembly:
Flat blade screwdriver
Socket wrench
18mm socket

This assembly includes:

- (1) Base
- (1) Post
- (1) Threaded rod
- (1) 10" mounting plate
- (1) Set screw
- (1) Nut

WARNING

Sharp edges may cause injury. Take care when handling metal parts.

Assembly (refer to illustration 1):

1. Insert threaded rod onto base. Thread spacer plate end of rod into base by turning rod clockwise.
2. With curved end down, position post overtop threaded rod. Ensure curved end of post rests flat against base.
3. Position 10" mounting plate on top of post, inserting end of threaded rod through hole in center of mounting plate.
4. Align set screw hole, in 10" mounting plate, with notch cut into top of post.
5. Use the flat blade screwdriver to install set screw through hole in mounting plate and into notch in post.
6. Thread nut onto end of threaded rod.
7. After ensuring that all parts are correctly aligned, use the socket wrench and 18mm socket to fully tighten nut.
8. Refer to the template attached to bottom of the table top for instructions on attaching base to top.

INSTALLATION INSTRUCTIONS