

Fig 1.

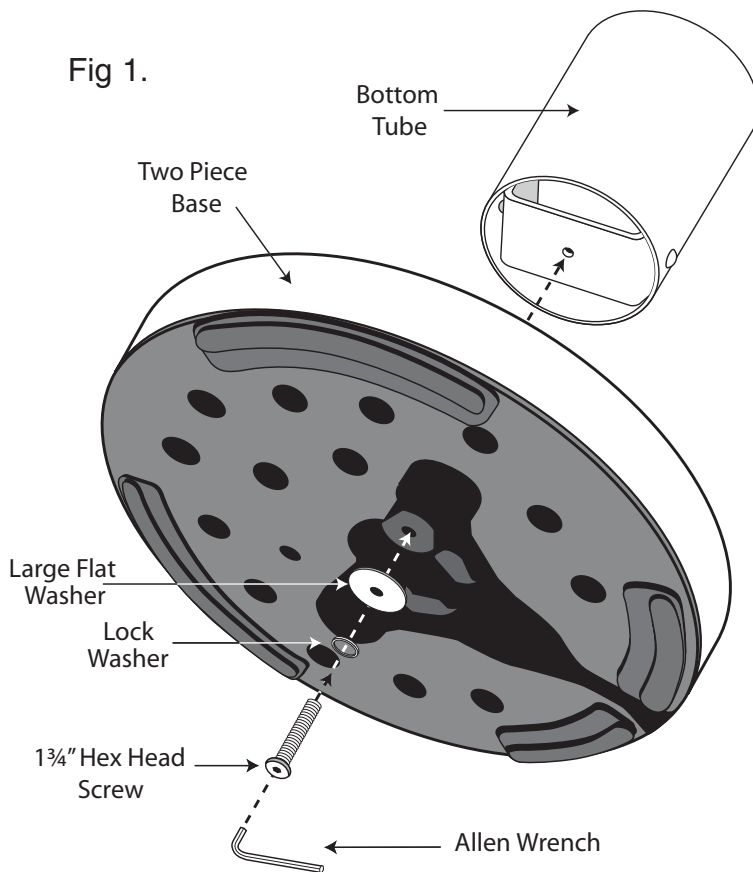


Fig 2.


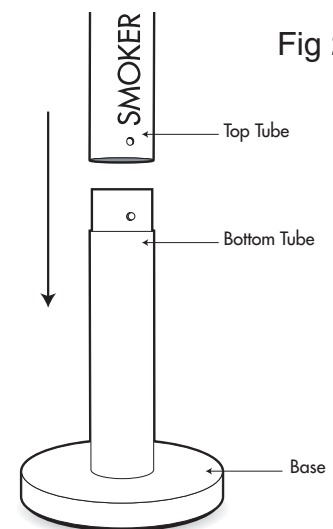


Fig 3.

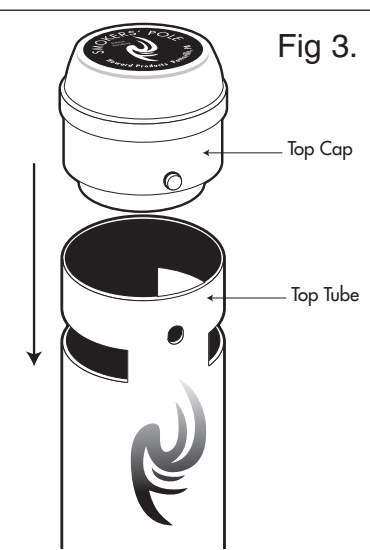

1. Attach Bottom Tube section to Two Piece Base using 1 3/4" Hex Head Screw and both washers. Align hole in Two Piece Base with Hole in the Base mounting Bracket at the bottom of the bottom tube section. (See Fig. 1)
2. Seat Top Tube section to Bottom Tube section by aligning locking hole in Top Tube with Snap Button in Bottom Tube. (See Fig. 2)
3. Seat Top Cap on Top Tube by aligning Snap Button on Top Cap with button hole in Top Tube. (See Fig 3.)