

# Assembly Instructions #7605



## 7605 Components:

- 1 Steel Base with plastic corners
- 2 Chrome Wire Uprights
- 4 Horizontal Steel Shelves
- 4 Phillips Screws
- 4 Rubber Feet

**You will also need a Phillips head Screwdriver to complete assembly.**



1. With Steel Base placed face up on work surface, insert each Chrome Wire Uprights into holes on base.



2. Turn unit onto its side, so that you have access to the bottom of the base. Secure Chrome racks with screws (make sure screws are snug) and attach Rubber Feet, twisting feet to make sure they are secure.




3. Clip one Horizontal Steel Shelf onto bottom rungs of the Chrome Wire Uprights.



4. Clip one Horizontal Steel Shelf onto second lowest rungs of the Chrome Wire Racks.



5. Clip one Horizontal Steel Shelf onto third lowest rungs of the Chrome Wire Racks.

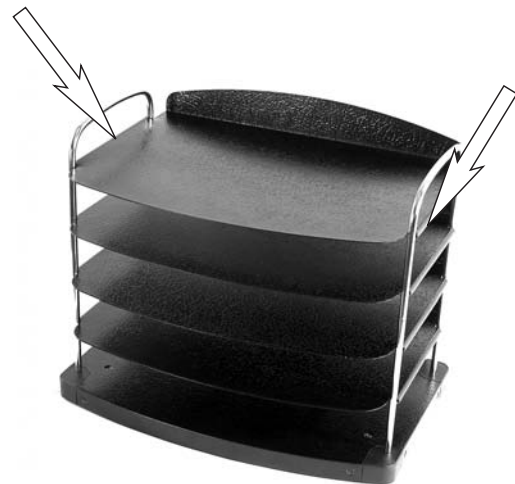

3. Clip one Horizontal Steel Shelf onto top rungs of the Chrome Wire Racks. Make sure all shelves are snapped on securely.

The 7605 Trio 5 Pocket Horizontal Desk Tray is now ready to organize your office!



**trio**<sup>TM</sup>  
5 Pocket  
Horizontal Desk Tray  
by **Buddy**  
Products

For questions or concerns, please contact Buddy Products customer service toll free: 1.800.886.8688 or via email: [custservice@buddyproducts.com](mailto:custservice@buddyproducts.com)