


Sterling Series [™]
Low wall Cabinet, Acrylic Doors
Model No. STLCC72/STLCC84

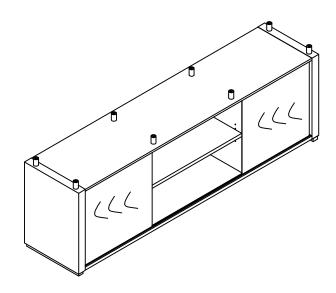

ASSEMBLY INSTRUCTIONS
CALL 1-800-822-8037 FOR ASSISTANCE

PARTS LIST

Name	Part	Qty.	Spare Qty
A	REALSO04 Wood Dowel	18	1
В	REALSO01	38	1
С	REALS002 Cam Post	38	1
D	REALS617** Cam Sticker	34	1
E	REALS425 Leveler	6	
F	REALS607 Base Stand-off	8	

Nama	Dort	Otr	Spare
Name	Part	Qty.	Qty
G	REALS606 M6 x 25mm	8	1
н	REALS009 Shelf Support	4	1
-	REALS632	4	1
J	REALS104 Grommet	2	
K	REALS518	4	1
	HARDWARE		
	STLCCHB		

Items with HB are in hardware box.

**Denotes Color Code

PARTS LIST


Name	Part	Qty.
L	STLCC~~L**	1
M	STLCCM** Left Side Panel	1
N	STLCCN** Right Side Panel	1
o	STLCC~~O** Bottom Panel	1
P	STLCC~~P** Back Panel	1
Q	STLCCQ** Left inside Panel	1


Name	Part	Qty.
R	STLCCR** Right inside Panel	1
S	STLCC~-S** Shelf Panel	1
т	STLCC~~T** fixed Shelf Panel	2
U	STLCC~~U** Slat for bottom panel	1
v	STLCC~~V Acrylic Doors	2

**Denotes Color Code ~~ Denotes Size-72/66


Review ALL instructions before beginning assembly. These instructions are provided to avoid problems that may occur from improper assembly or installation. Mayline and/or its distributor are not responsible for failure resulting from improper assembly or installation of this product. Moreover, all warranties are void for failure to follow these assembly instructions.

Insert Cam (B) into fixed shelves Panel (T). Install Cam Posts (C) into inside Panels (Q/R). Attach inside Panel (Q/R) to fixed shelves Panel (T).

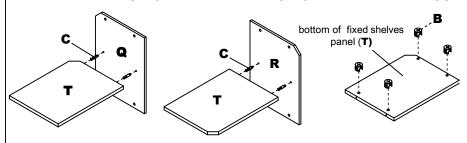


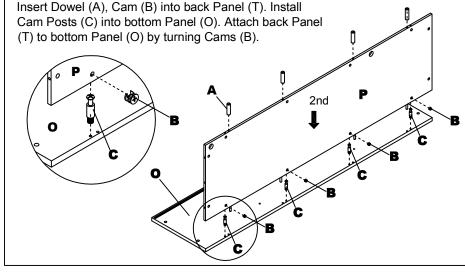



Insert Cam (B) into inside Panel(Q,R) . Install Cam Posts (C) into bottom Panel (O). Attach inside(Q,R) Panel to bottom Panel (O) by turning Cams (B). Install grommets (J) into back panel(P) .

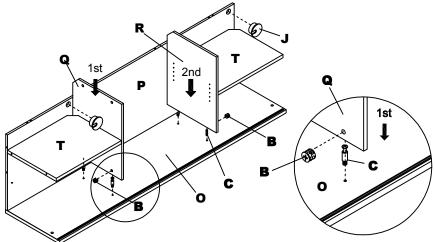

Insert Cam (B) into inside Panel (Q,R) and back panel (P). Install Cam Posts (C) into top Panel (L). Attach top Panel (L) to inside Panel(Q,R) and back panel (P) by turning Cams (B). Apply Cam Stickers (D) to Cams (B) of inside Panel (Q,R), back panel (P).

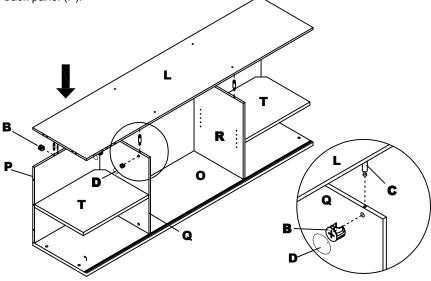

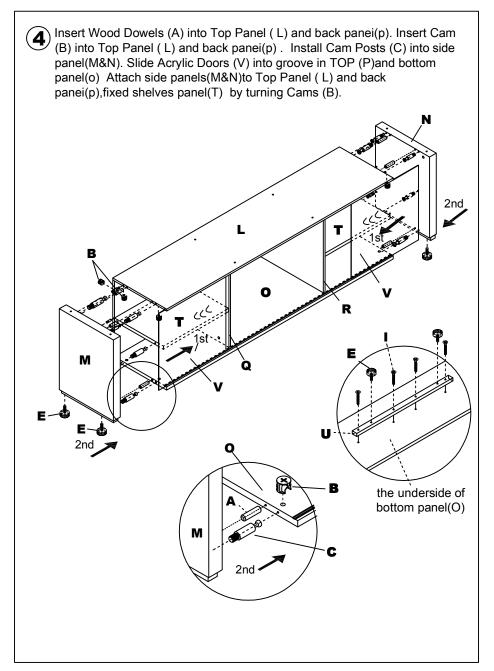

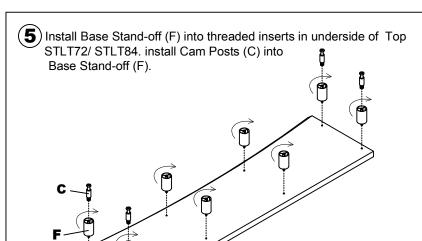

Insert Cam (B) into side Panel (L) and back panei(p). Install the cabinet Top STLT72/ STLT84 to the Cabinet body STLCC72/84 using Screws (G). Apply Cap(k) to Cams (B) of Side Panel (M &N).

