




ASSEMBLY INSTRUCTIONS


6500 STOOL SERIES | ADJUSTABLE HEIGHT & BACKREST INSTALLATION

ADJUSTABLE HEIGHT


6500 STOOL PARTS

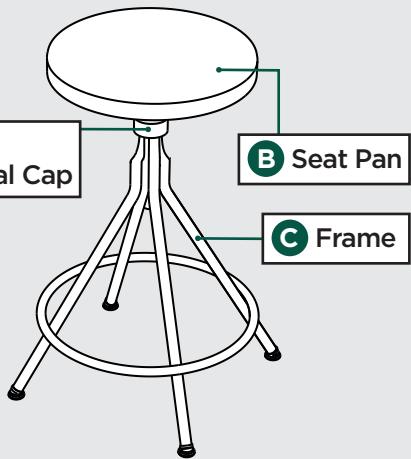

- 1 Place Stool on an elevated sturdy surface. Locate Chrome Cylindrical Cap **A** which is located below the Seat Pan **B**.

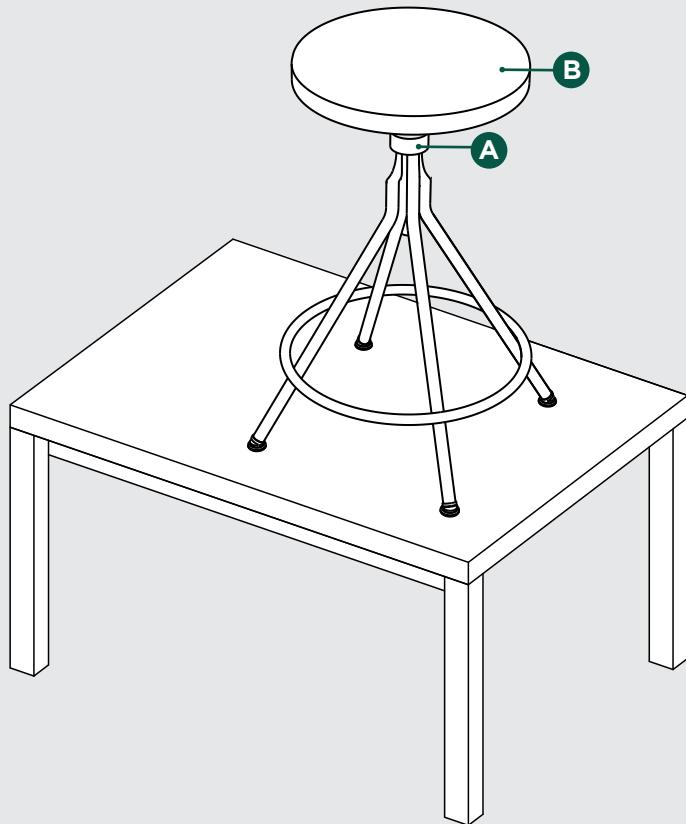


- 2 Get a grip on the Chrome Cylinder Cap using only your thumb and index finger. While maintaining grip on Cap, rotate the Swivel Stool to desired height.

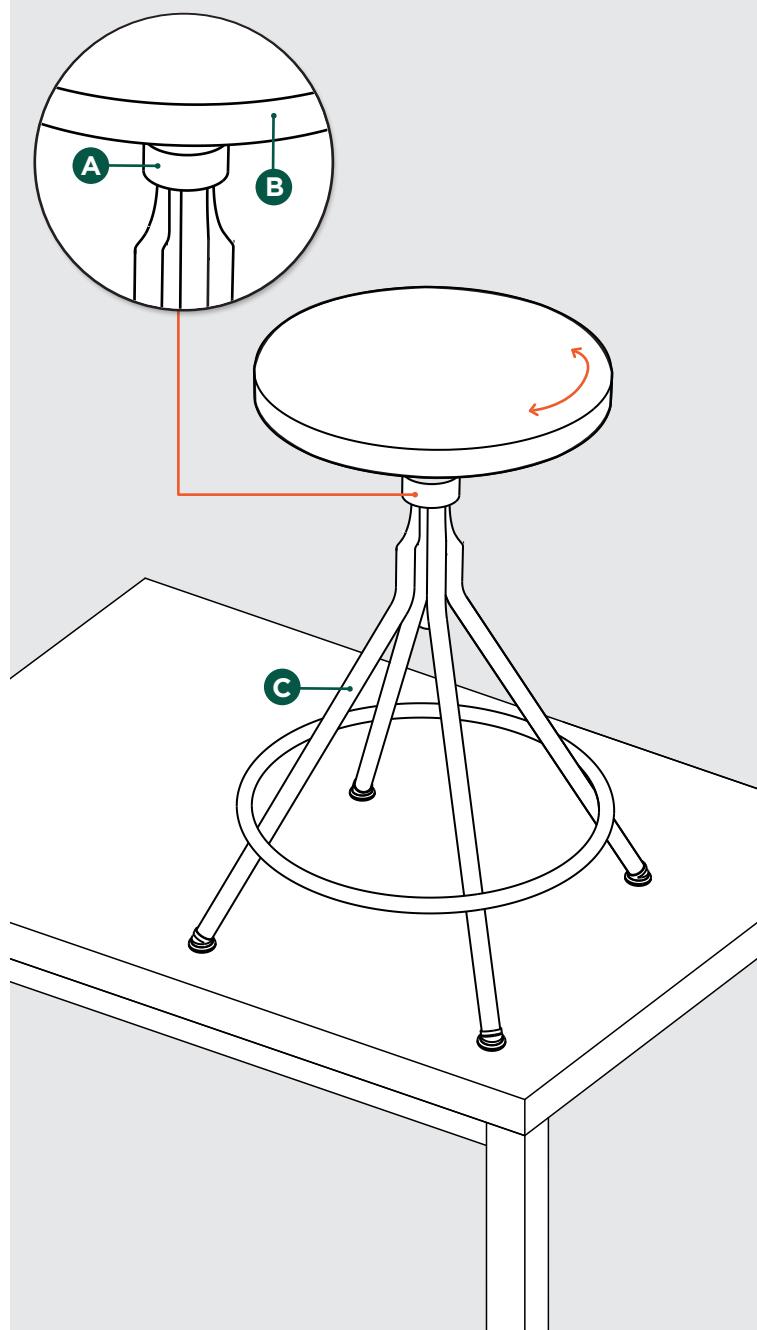


Use Caution not to pinch fingers between Cap and Stool Frame **C.**

BACKREST INSTALLATION

PARTS

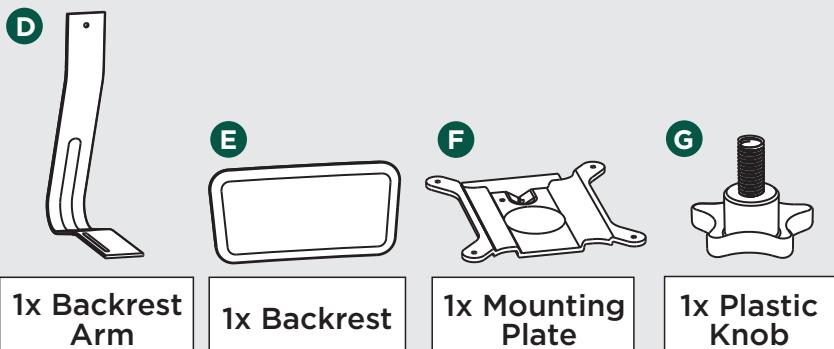


1 Turn Stool upside down onto an elevated flat sturdy surface. Screw the supplied Knob **G** into the threaded hole in the center of the Mounting Plate **F**.

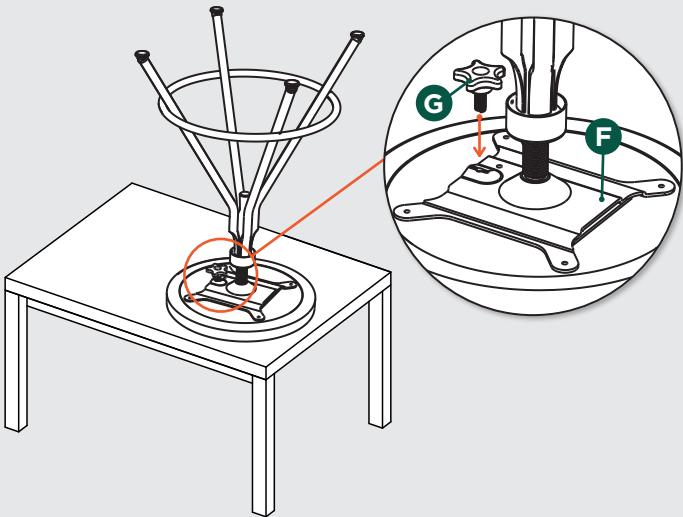

2 Insert the shorter Black End of the Backrest Arm **D** into the opening of the Mounting Plate **F** until the Arm begins passing the Knob location. Tighten the Knob **G** securely at the desired horizontal location.

3 Turn the Stool Back to its upright position. Slide the Backrest **E** on the Backrest Arm **D**, so that the slot on the Backrest aligns with the threaded hole in the top edge of the Backrest Arm. Drive the supplied Bolt **4** and Washers **2** **3** thru the slot of the Backrest and into the threaded hole on the Backrest Arm. Tighten securely at desired height.

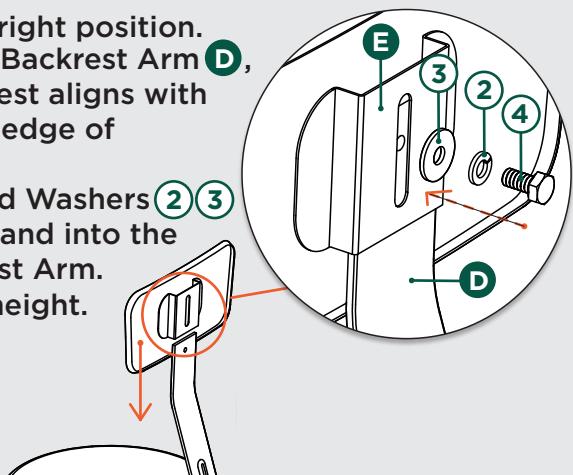

Double check all Bolts to be tightened securely before use. Check all Bolts periodically. Failure to completely tighten the Bolts may result in tipping and possible injury!

Congratulations, your STOOL WITH BACKREST AND ADJUSTABLE HEIGHT is now assembled and ready to be used!

Dear Customer, Thank you for your purchase. Although extreme care goes into manufacturing & packaging of this product, mistakes are possible. If you encounter any missing parts or difficulty in assembly, please contact our customer service Toll Free at **1-800-261-4112** or info@nationalpublicseating.com for courteous & immediate resolution to your problem.